## K Bike Dash Switch Part Numbers

V2 0 11/26/18

K bike dash switches are sold either as complete switches or you can buy the small graphic inserts as a separate part. If you take the top rocker part of the switch off you can push the graphics insert out from behind and replace it. Be careful doing this though as there's a couple of very small parts that can get lost easily.



## **COMPLETE SWITCHES:**

Part Number	<u>Description</u>	Insert Color	<u>Picture</u>	<u>2018 Price</u>
61311459305	Hazard Switch Non-momentary On/Off	Translucent red.		\$57.81
61311459700	ABS Switch Momentary On/Off	Translucent red.	ABS	\$65.00
61311459234	Heated Grip Switch Non-momentary On/Off/On  (The up position is the high setting, the down losition is the low setting.)	Solid black.		\$67.10
61312305088	Windscreen Switch Momentary On/Off/On	Translucent green.	9%	\$71.56
61311459306	Additional Switch This is a 3 position switch. On, off, and momentary on.  (This switch exists for lighting and sirens on police bikes.)	(No insert.)		\$55.63

## **GRAPHIC INSERTS:**

Part Number		rt Color	<u>Picture</u>	2018 Price
61311459360	Heated Grips	Solid black.		\$9.71
61311459361	Signal Light	Solid black.	<u>-Ö-</u>	\$9.69
61311459362	Horn	Solid black.	-	\$9.69
61311459363	Blank, no graphics	Solid black.		\$1.96
61311459367	Hazard	Translucent red.		\$8.07
61311459703	ABS	Translucent red.	(ABS)	\$9.71
61311459359	Fog Light	Solid black.	()手	\$9.69
61312305193	Windscreen	Translucent green.	10	\$9.69
61312305197	Orange, no graphics	Translucent orange.		\$9.69